



Disassembling Nokia 2366i Rear Case

Written By: Jonathan Newman



INTRODUCTION

This guide is a step by step procedure to disassemble the base of the phone. It is the preliminary step in gaining access to the inner components of the Nokia 2366i.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Turn off the phone.
- ⓘ Position the phone so that the back side is in view.

Step 2




- Apply pressure on the cover while simultaneously sliding the cover downward.
- Remove the back battery cover.

Step 3



- Insert the spudger between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
- Carefully lift the battery out of the phone.
- ❗ The battery lifts out of the phone easily.

Step 4 — Rear Case

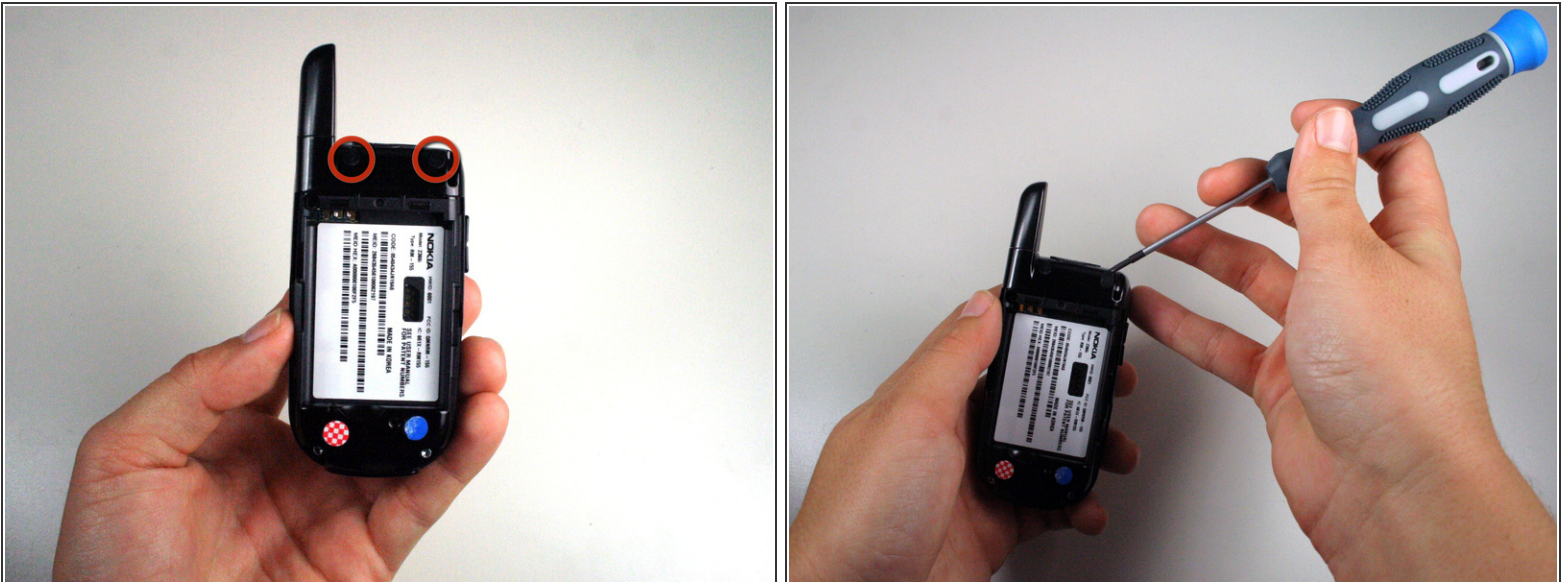

- Use a Phillips #00 screwdriver or your fingers to remove the rubber tabs at top back of the phone.

Step 5



- Remove four 5mm screws from the back of the phone using a T6 Torx screwdriver:
 - 2 screws at the bottom
 - 2 screws at the top

Step 6



- ① Rotate the phone clockwise so the edge is facing you.
- Insert the spudger in tabs between the outer casing and the inside frame.
- Slide the spudger upwards.
- ① This will remove the rear case of the phone.

Step 7



- The phone should now be in two different sections.
- 1) The rear case of the phone.
- 2) The motherboard and the rest of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:39:27 PM.